## **Modefixxer - Installation instructions and maintenance**

Installation of your Modefixxer DH

Before assembling your Modefixxer DH, please make sure your package contains all your Modefixxer parts.


Your Modefixxer DH package comes with following parts:

#### **Modefixxer DH**

- 2x Modefixxer arms
- 2x Modefixxer bushings
- 1x distance sleeve

#### Preparation

Remove your original Shapeshifter gas spring from your bike. To remove
it properly, please follow the instructions, in the following link, if you are
uncertain, how to do:

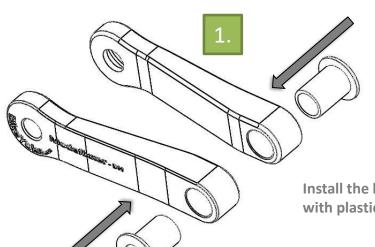


https://www.youtube.com/watch?v=9GhPBp3zC6M

Install the bushings into the Modefixxer body. Use a proper tool (e.g. a vice with plastic clamps) and do not damage the bushings or the bushing seat.

# **Modefixxer - Installation instructions and maintenance**

Installation of your Modefixxer DH

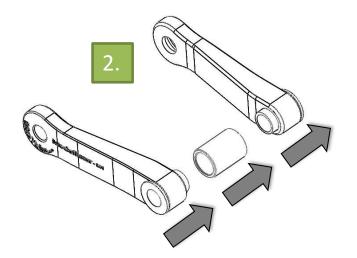

Push the right Modefixxer arm, the distance sleeve and the right Modefixxer arm onto the 8mm axle located in the rockarm.

Please note: Unlike the original gas spring the Modefixxer does not need to rotate and the bushings have a tighter fit on the axle to avoid any radial play. The Modefixxer might be harder to slider onto the axle than your gas spring.

Follow the instructions in the video to complete the rockarm reassembly.

https://www.youtube.com/watch?v=9GhPBp3zC6M

Well Done! Have fun riding with your new Modefixxer!

## **Modefixxer - Installation instructions and maintenance**

Maintenance of your Modefixxer DH

It is very important to check your Modefixxer DH for proper installation and tight fit, to make sure it can function properly:

#### **Before every ride:**

• Check your Modefixxer for tight fit. If there is any play in your suspension or at your Modefixxer you need to replace your bearings and/or bushings. Otherwise your parts will be suffering extraordinary wear and even cause damage to your bike and lead to crashes.

### After every 10 hours of riding:

- Inspect your Modefixxer for any visible damage like cracks or scratches, or extraordinary wear
- Inspect the bearings of your rear suspension and replace them if there is any play. Increased bearing or bushing play in your rear suspension can result in damage to your Modefixxer.

Before and during riding, always remember:

Safety first!!!

Check and make sure your Modefixxer and your Bike are properly serviced and maintained!