



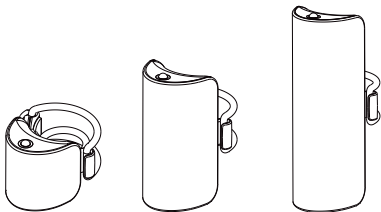


Cobber




QUICK START GUIDE

CHARGE BEFORE FIRST USE

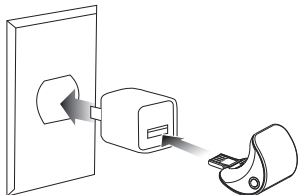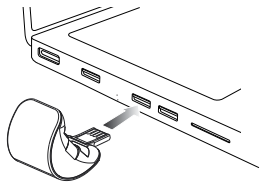

OPERATION

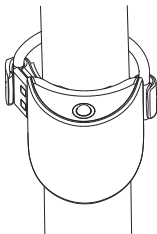

Long press the power button to turn light **on and off**.

Short press to cycle between modes.

When the LED ring around the power button lights up, the battery is low.

 
The LED ring glows red when charging, and glows green when the Cobber is fully charged.

FITMENT


Cobber Front & Rear

3 Straps included
in each pack


1. SML: Ø 22-27MM
2. MED: Ø 27-32MM
3. LRG: Ø 32+MM



EYESAVER MODE

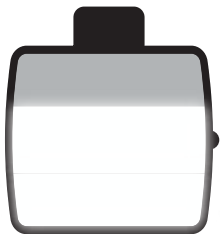

FRONT LIGHT:
Top channel disables
in Eyesaver mode.

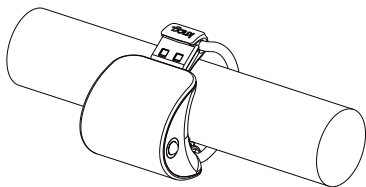


MODEMAKER

Knog's ModeMaker app allows you to update the modes for Cobber bike lights. Simply download the software from knog.com.au, plug your light in, using the supplied USB-A extension cable*, then select and tailor modes from the menu.

1. Download the app from knog.com.au/modemaker
2. Plug the light in and follow on-screen prompts to register your product.
3. Follow tutorial to update your modes.


* Cable included in Mid & Big Cobber pack only.

MOUNTING

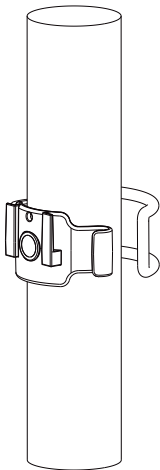


1. Hook silicone strap into one side of the mount. Pull around the seat post or steerer tube and secure strap in opposite hook.

MOUNTING

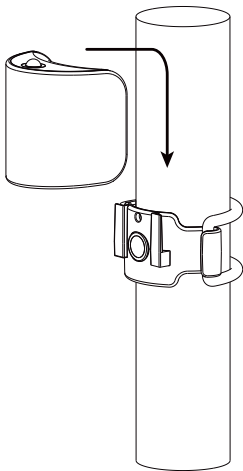


2. Slide Cobber onto mount.
Ensure that it snaps into place.

MOUNTING

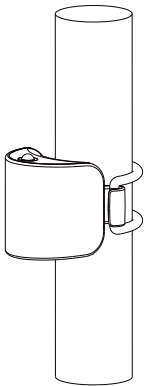

3. Place on seatpost or steerer for 330° beam & vertical flash patterns.

Place on handlebars using **Eyesaver mode.**

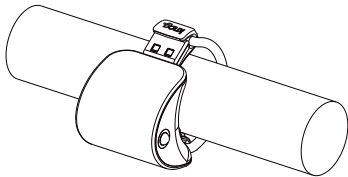

WARRANTY INFORMATION

This light is guaranteed for 2 years against manufacturing defects only.

The battery is guaranteed for 6 months against manufacturing defects only. See the website for more details.

For more information and updates go to

KNOG.COM.AU

Go to Cobber video