

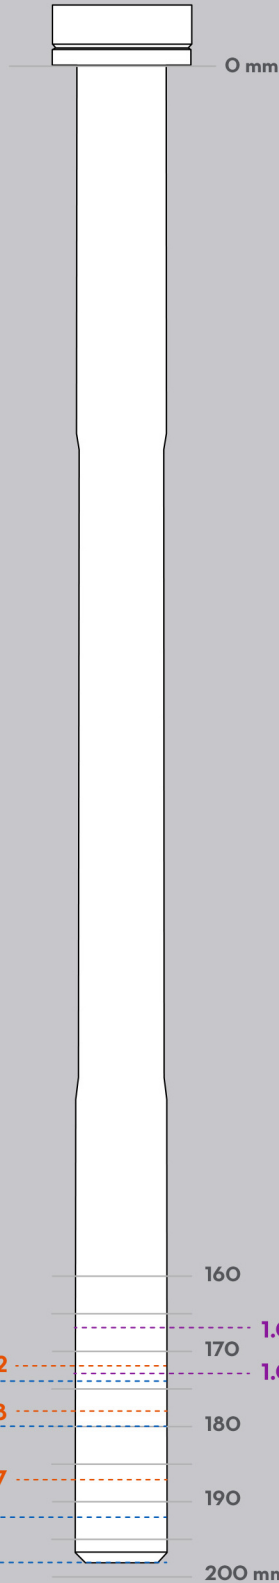


You must verify that your printout is 100% scale before measuring your axle

Place your ruler next to the scale after printing

VERIFY SCALE

IN CM



 
 

WOLF TOOTH

REAR AXLE MEASUREMENT GUIDE

This guide needs to be printed at 100% to ensure proper axle sizing. After printing this guide use your ruler and the ruler down the center to verify scale.

First match the thread pitch by overlaying axle on thread guide below and selecting same thread spacing. It's important to do this first as some of the lengths have only 1 mm separation.

THREAD PITCH

| | | |
|--|---|---|
| 1.75 mm | 1.5 mm | 1.0 mm |
|  |  |  |

Measure the length of your axle by aligning the axle at 0 mm then use the scale provided.

NOTE* This guide is using Wolf Tooth specifications. Axle length and head dimensions may vary depending on manufacturer. Line up your axle starting at 0 mm on the guide.

Axle length is compatible +/- 2 mm

Explore more product solutions at:
wolftoothcomponents.com

Follow us on:   