




Carbon-Ti

Asse passante posteriore X-Lock 12 mm

ITALIANO

Vi ringraziamo per aver acquistato un prodotto Carbon-Ti, eventuali piccole imperfezioni estetiche sono da imputarsi alla realizzazione manuale dello stesso e contribuiscono ad esaltarne la natura artigianale.

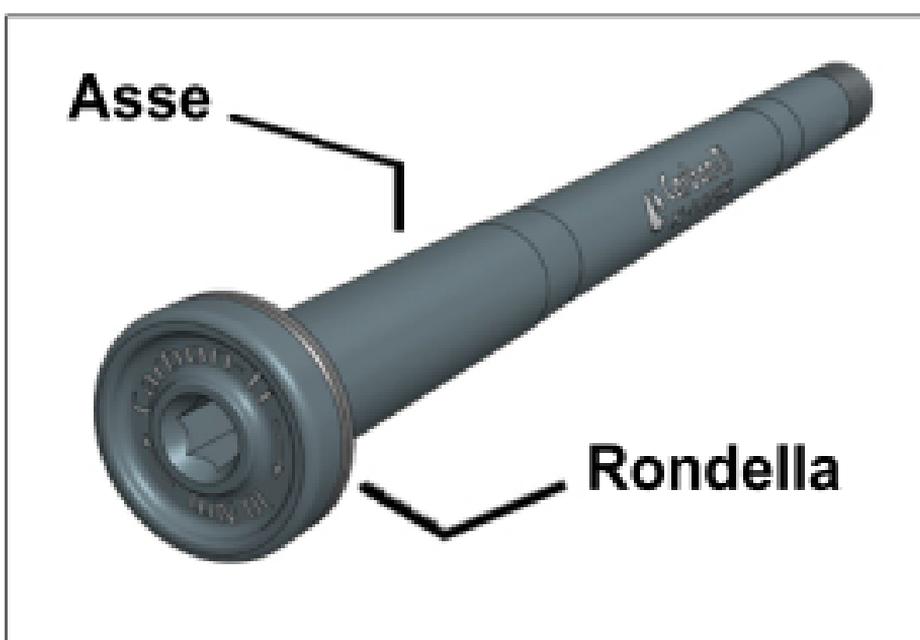

Prima di iniziare

Gli assi passanti posteriori da 12 mm sono disponibili in diversi standard.

Verificare che il modello acquistato sia compatibile con il vostro telaio nella relativa pagina di prodotto del sito www.carbon-ti.com.

Installazione

Verificare che le sedi di inserimento nel telaio siano perfettamente pulite. Lubrificare la superficie dell'asse con del grasso al litio o per cuscinetti.

Posizionare la rondella antigripante sotto la testa della vite come in figura. Inserire la ruota nel telaio ed infilare l'asse, avvitandolo in senso orario con una chiave esagonale da 5 mm (non fornita in dotazione) con una coppia di serraggio pari a 10 Nm.

Verificare periodicamente il corretto serraggio dell'asse.



**L'asse passante posteriore
X-Lock 12 mm
è 100% Made in Italy**

Carbon-Ti
by LLS Titanium srl

Via per Ospitaletto, 147
25046 Cazzago S.Martino
(Brescia) – ITALY

Tel. (0039) 030.7255176

Fax. (0039) 030.7255261

Sito web: <http://www.carbon-ti.com>

e-mail: info@carbon-ti.com



Carbon-Ti

X-Lock 12 mm rear Thru Axle

ENGLISH

Thank you for purchasing a Carbon-Ti product, any small aesthetic imperfection is due to the handmade manufacturing and contributes to exalt the handcrafted nature.



Before you start

X-Lock 12 mm thru axles are available in several standards. Make sure that your model is compatible with your frame in the correspondent product page of the site www.carbon-ti.com.

Installation

Verify that the slots of the frame are perfectly clean.
Lubricate the surface of the axle with lithium or bearing grease.
Put the anti-seize washer under the bolt head as shown in picture.
Install the wheel into the frame and insert the axle turning it clockwise with a 5 mm Allen key (not supplied) with a 10 Nm torque.
Check the proper tightening of the axle periodically.



**X-Lock 12 mm rear Thru Axle
is 100% Made in Italy**

Carbon-Ti
by LLS Titanium srl

Via per Ospitaletto, 147
25046 Cazzago S.Martino
(Brescia) – ITALY

Tel. (0039) 030.7255176

Fax. (0039) 030.7255261

Sito web: <http://www.carbon-ti.com>

e-mail: info@carbon-ti.com