




X-CAP CARBON

ENGLISH

Thank you for purchasing a Carbon-Ti product, any small aesthetic imperfection is due to the handmade manufacturing and contributes to exalt the handcrafted nature.

Before starting

Make sure that the stem is positioned at least two millimeters above the steering tube. Otherwise, cut the steering tube or place some spacers on the top of the stem.

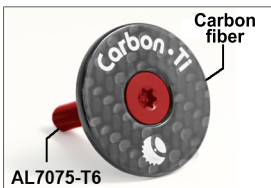

Installation

Be sure that the steerer tube fixing bolts of the stem are loosened.

Place the X-Cap top on the stem or on eventual spacers and gradually tighten with a T25 torx key the preloading bolt in order to completely remove the play among the bearings headset. The tightening torque must be such as to completely remove the play but not to increase the friction during the handlebar turning.

Do not tighten the preloading bolt over the 2,5 Nm. In any case the cap should never appear warped. Tighten the steerer tube fixing bolts of the stem following the manufacturer product instruction. Check the tightening after the first ride.

It's recommended to check periodically the stem and the X-Cap bolts tightening.

X-Cap Carbon is 100% Made in Italy

Carbon-Ti
by LLS Titanium srl

Via per Ospitaletto, 147
25046 Cazzago S.Martino
(Brescia) – ITALY

Tel. (0039) 030.7255176

Fax. (0039) 030.7255261

web site: <http://www.carbon-ti.com>

e-mail: info@carbon-ti.com