




**Carbon-Ti**

## **X-CLAMP 3**

### **ENGLISH**

*Thank you for purchasing a Carbon-Ti product, any small aesthetic imperfection is due to the handmade manufacturing and contribute to exalt the handcrafted nature.*

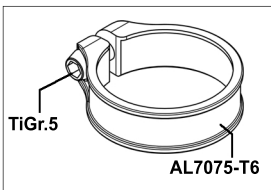

### **Before you start**

Check the size and the proper fitting between the X-Clamp 3 and your frame.

The size of the seatpost clamp should be the same diameter as that of the seat tube: a tolerance larger than  $\pm 0,5$  mm might adversely affect the installation. Check the maximum torque allowed by the frame and the seatpost which you plan to fit.

### **Installation**

Clean the frame surface which comes into contact with the seatpost clamp. Insert the seatpost clamp until the internal lip meets the top of the seat tube. Tighten the seatpost clamp bolt to 5 Nm maximum torque or less if the tightening torque permitted by the frame or by the seatpost are lower. Check periodically the seatpost position and tightness of the seatpost clamp.

Use only specific Carbon-Ti Titanium Grade 5 spare bolt.

**X-Clamp 3 is 100% Made in Italy**

**Carbon-Ti**  
by LLS Titanium srl

Via per Ospitaletto, 147  
25046 Cazzago S.Martino  
(Brescia) – ITALY

Tel. (0039) 030.7255176

Fax. (0039) 030.7255261

Sito web: <http://www.carbon-ti.com>

e-mail: [info@carbon-ti.com](mailto:info@carbon-ti.com)