




Carbon-Ti


X-FIX

ENGLISH

X-Fix STD

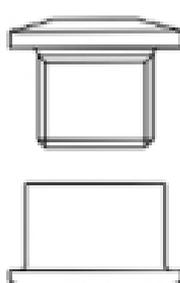


X-Fix XS

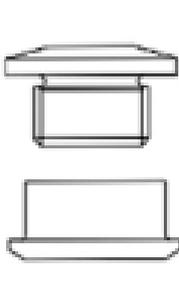

X-Fix M10




X-Fix XX1

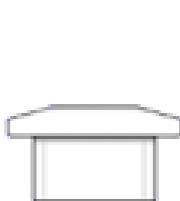

X-Fix XL 20*



X-Fix XL

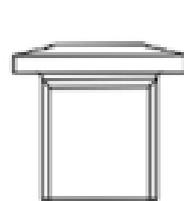

Installation

We recommend to apply a drop of medium threadlock on the screws threads.

X-Fix MTB & MTB 20

Fix the smaller chainring placed in the inner position with the male X-Fix XL fixing bolts and tighten with a Torx® T30 key at 6 Nm. Fix the bigger and the middle chainrings with male and female X-Fix fixing bolts and tighten with Torx® T30 and 6 mm hex keys at 6 Nm.

X-Fix MTB XS & MTB XS 20

Fix the smaller chainring placed in the inner position with the male X-Fix XL fixing bolts and tighten with a Torx® T30 key at 6 Nm. Fix the bigger chainring to the crankset with male and female X-Fix XS fixing bolts and tighten with Torx® T30 and 6 mm hex keys at 4-6 Nm.

X-Fix XX

Fix the smaller chainring placed in the inner position with the male X-Fix XL fixing bolts and tighten with a Torx® T30 key at 6 Nm. Fix the bigger chainring to the crankset with male X-Fix M10 fixing bolts and tighten with Torx® T30 key at 6 Nm.

X-Fix XX1

Put the chainring so that the chainring threads are inside the crankset holes. Put the screws and tighten with Torx® T30 at 6 Nm.

X-Fix ROAD

Fix the both the chainrings with male and female X-Fix fixing bolts and tighten with Torx® T30 and 6 mm hex keys at 6 Nm.

Check the proper tightening of all fixing bolts periodically.

* Screws head with reduced footprint for fixing the special chainring X-ring Full-Ti 20x64

X-FIX is 100% Made in Italy

Carbon-Ti
by LLS Titanium srl

Via per Ospitaletto, 147
25046 Cazzago S.Martino
(Brescia) – ITALY

Tel. (0039) 030.7255176

Fax. (0039) 030.7255261

web site: <http://www.carbon-ti.com>

e-mail: info@carbon-ti.com