




# Installation Guide

---

## NRC DIRECT MOUNT HANGER UDH

for Shimano.

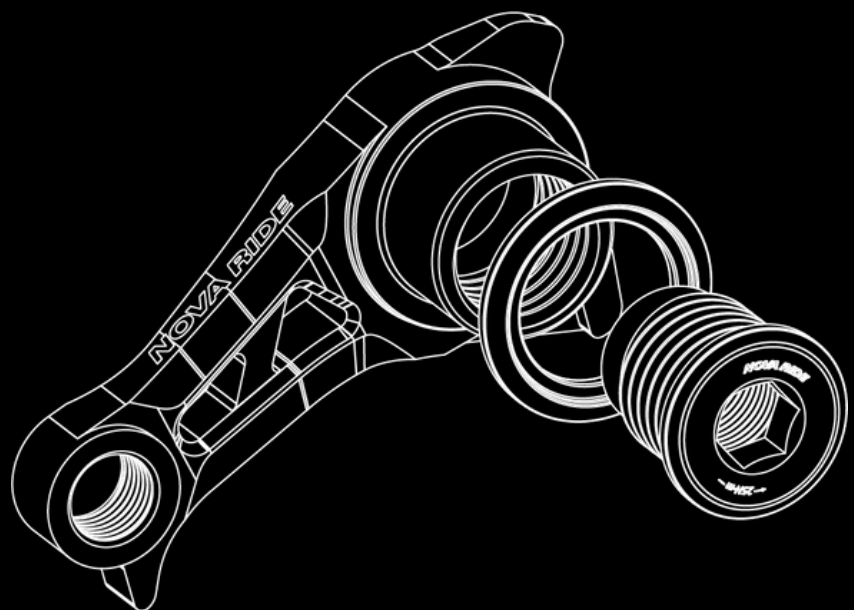

# CE QUI EST NÉCESSAIRE POUR L'INSTALLATION

1. Nova Ride derailleur hanger.
2. 5mm and 8mm hex Allen keys.
3. Torque wrench.



## COMPATIBILITIES

DERAILLEUR NAME	SPEED	REAR DERAILLEUR REFERENCE
<b>105</b>	11	<b>R7000</b>
	12	<b>R7100, R7150</b>
<b>ULTEGRA</b>	11	<b>R8000, R8050, RX800, RX805</b>
	12	<b>R8150</b>
<b>DURA-ACE</b>	11	<b>R9100, R9150</b>
	12	<b>R9250</b>
<b>GRX</b>	11	<b>GRX 810, GRX 812, GRX 815, GRX 817</b>
	12	<b>GRX 820</b>

# STEP-BY-STEP INSTALLATION

1. Shift the rear derailleur to the smallest sprocket.

Remove the rear wheel from your bike.




2. Unscrew the rear derailleur using a 5mm hex Allen key.



3. Remove the existing derailleur hanger using an 8mm Allen key.


Then clean the mounting area.

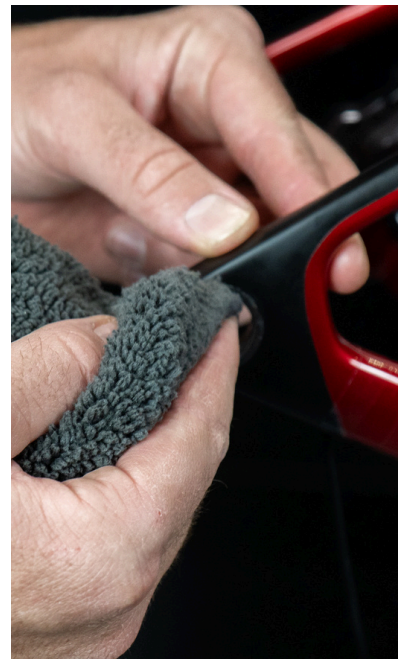

4. Install your new Nova Ride derailleur hanger by positioning it in the stop position.



5. Tighten the screw counterclockwise to a torque of 25 N.m using a torque wrench.

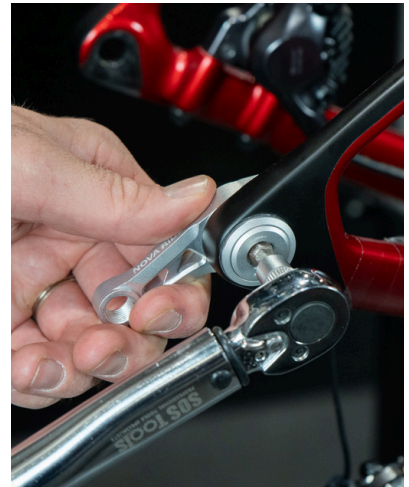

6. Install the derailleur onto the Nova Ride derailleur hanger using a 5mm Allen key.

Tighten the derailleur bolt to a torque of 10 N·m using a torque wrench.



7. Reattach the rear wheel to the bike.




8. Check the derailleur limit screw adjustment.

Check the derailleur cage adjustment.

Check the derailleur indexing and gear shifting.

Adjust if necessary.



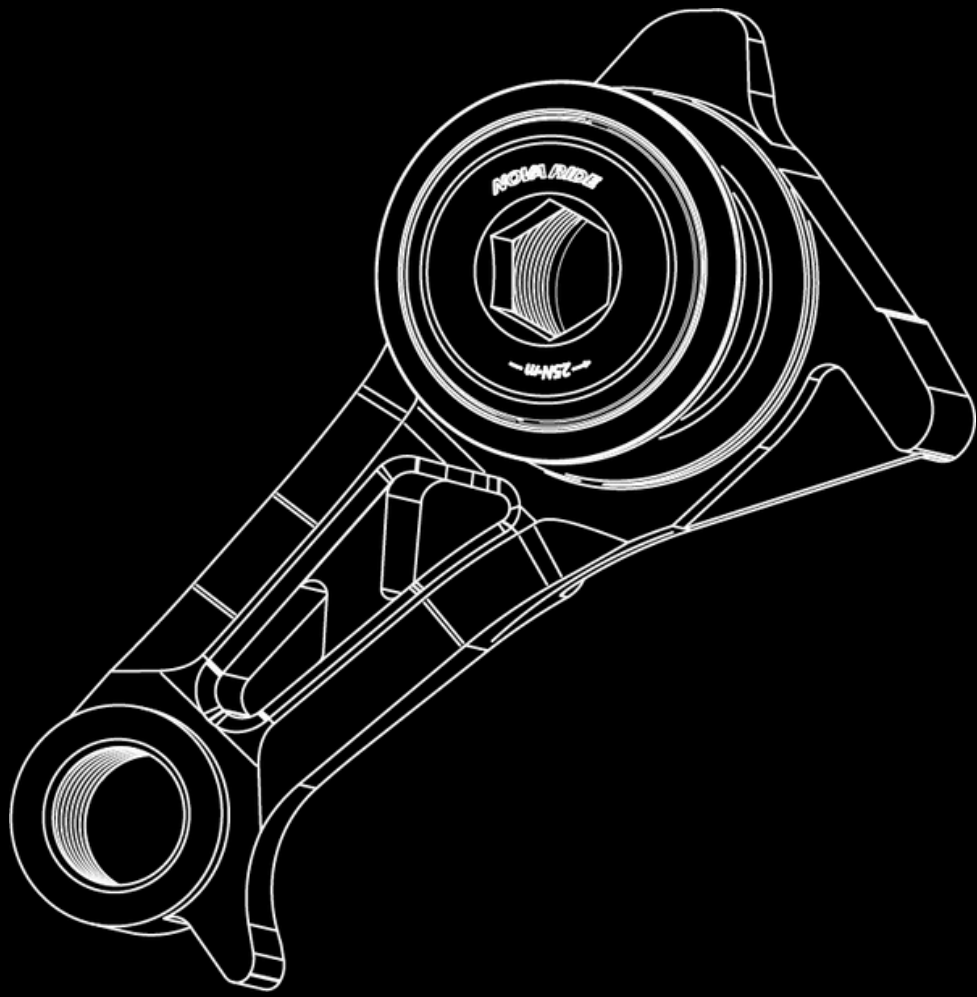

[www.novatoride.com](http://www.novatoride.com)

2026 © Nova Ride. All rights reserved.