Info Sheet

UFO Drip Chain Coating

New and Improved Formula




Unique Selling Points

- All disciplines
- 300 km per coating
- Over 15% faster than previous formula
- More than 35 coatings per bottle
- Non toxic, non-flammable, bio-degradable formula
- Increased temperature stability apply between 5-35°C / 41-95°F
- Reduced price compared to previous formula: €40 / \$45 (previous prices were €70 / \$75)

New vs. Old Formula

- 15% faster
- 50% longer lasting
- 50% more coatings per bottle
- 40% lower price

Lubricant Test (Dry - 5 hours test)

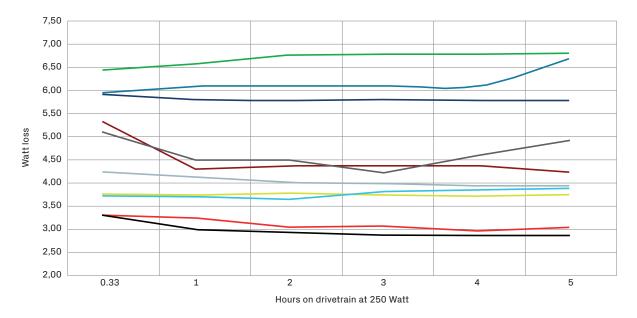





Application

For new chains and first application, fully clean and dry the chain, ensuring to rinse all cleaner off before drying. We recommend CeramicSpeed Clean Drivetrain for this purpose. Always shake the bottle well before each use to ensure an even application of waxes. Apply UFO Drip directly to the chain rollers over the cassette, rotating the chain slowly backwards. Coat the entire length of the chain twice, roughly 8-10ml. Allow UFO Drip to dry a minimum of 8 hours for best results and clean performance.

For follow up applications with an overall clean drive train, wipe the chain surface with a dry and clean cloth, and repeat the above process beginning with shaking the bottle of UFO Drip. You will use less UFO Drip for follow up applications, around 5-7ml. Let dry for 8 hours.

If your drive train has become thoroughly dirty and contaminated, begin with a full cleaning as you would for a first application.

